



## QuickScreen 3 - Change cassette

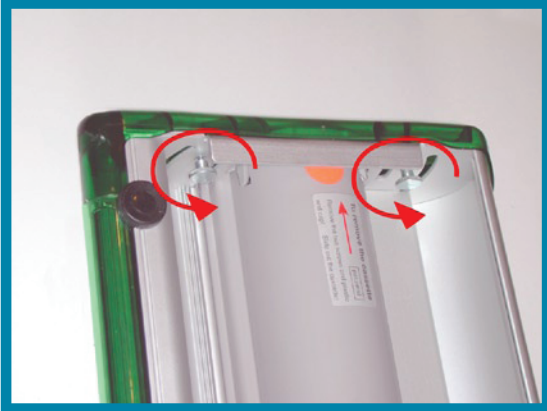

1. Turn the QuickScreen 3 upside down.  
Unscrew the screws.

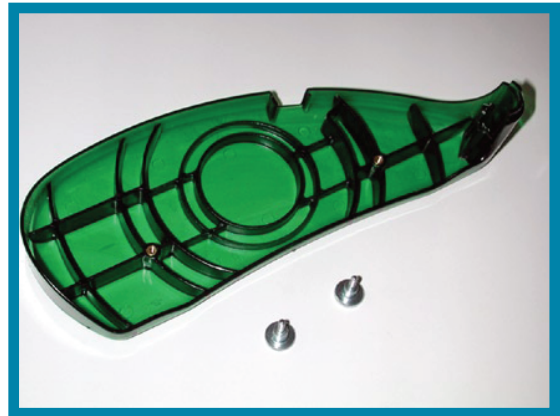

2. Remove the plastic cap.



3. Exchange the cassette and put back the  
plastic cap.

Done