



Set Up Instructions

DNA CURTAIN STORAGE


Step 1: Insert the pole into the pocket opening of the fabric

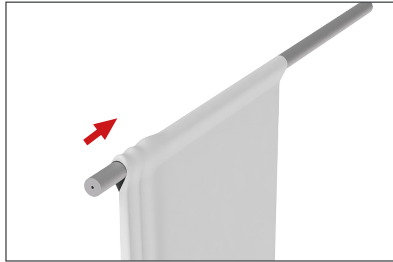

Step 2: Fasten the clamp fittings to both ends of the rod with screws.

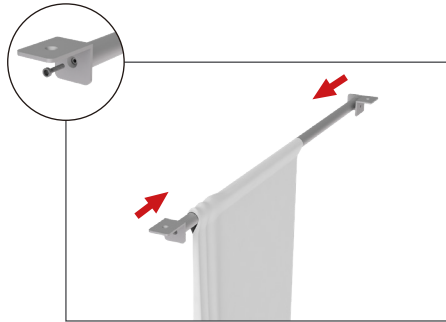

Step 3: Attach curtain rod clamps to the corners of each light box.

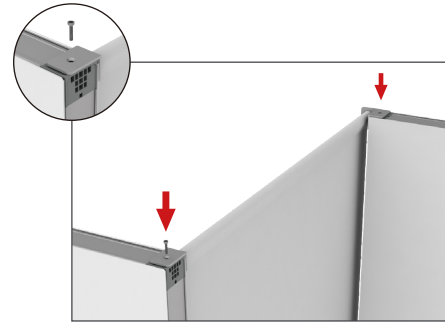

Step 4: Complete.

