


Set Up Instructions

DNA CONNECTION 90° - EDGE TO EDGE


Step 1: Install the connector on the bottom by using the 90° brackets. Place the rubber gasket between the bracket and the corner of the stand. Install the screw into the center hole of the bottom corner piece.



Step 2: Repeat Step 1 on opposite side of connector.

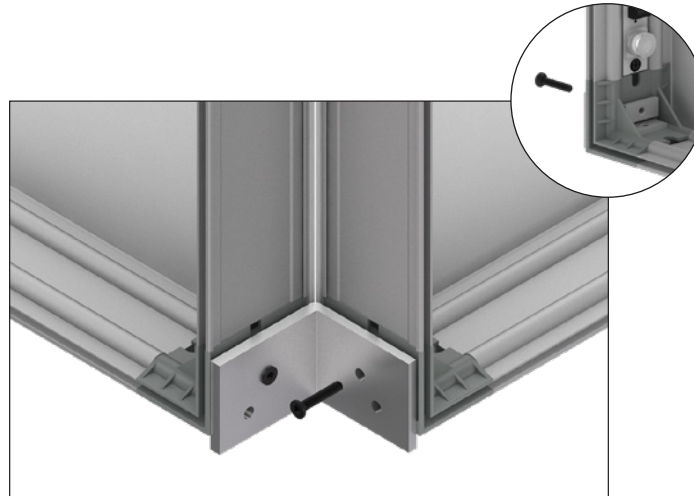


Step 3: Repeat Step 1 and 2 at top of display stand.

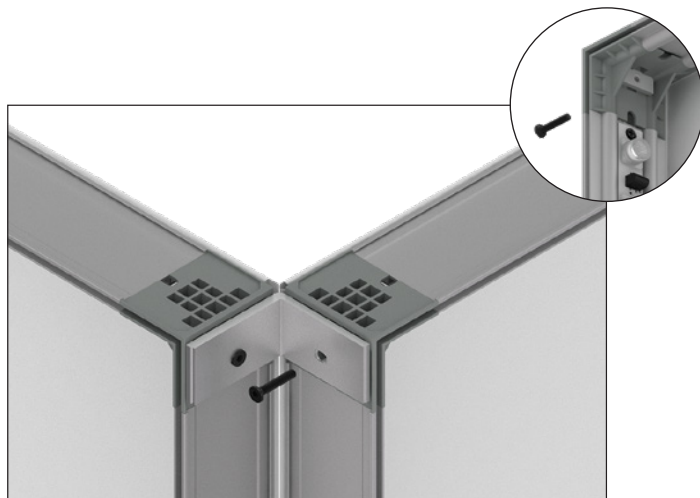

Set Up Instructions

DNA CONNECTION 90° - OVERLAPPED


Step 1: Install the connector on the bottom by using the 90° brackets. Place the rubber gasket between the bracket and the corner of the stand. Install the screw into the center hole of the bottom corner piece.

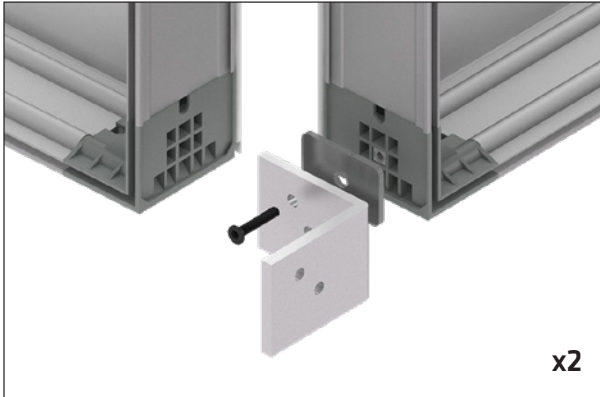

Step 3: Repeat Step 1 on opposite side of connectors.



Step 2: Repeat Step 1 on opposite side of connector.

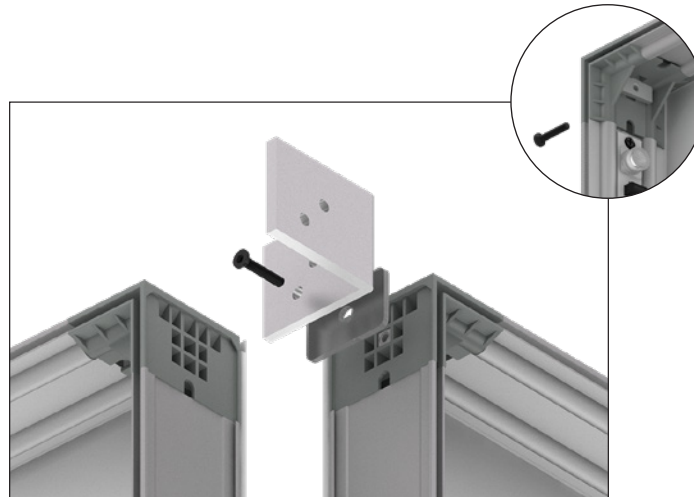

Step 4: Complete install of connectors by pushing the DNA Panel into place and installing screws top and bottom.

