




Hardware														Countertop		Graphics		cessori	ies	es Shipping Case		
IFD04CV	2											Yes / No			Single or Double-sided		IFD-29	2		CA900		
IFD04F	1											IFD-24	8		None		IFD-31	2		CA500		
WLM -P-SCS	4											IFD-25	4		Complete					NYLON BAG		
IFD-32	8											IFD-26	2		Split-ship							
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm


FRAME ASSEMBLY:


Assemble base parts and poles by pressing and pushing together.

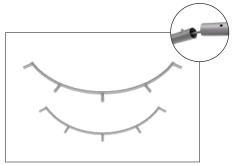



*NOT ALL PARTS WILL BE USED:


This counter is made from x3 full kits and not all parts will be needed to complete this design.

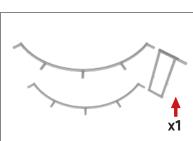


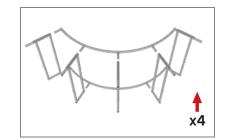


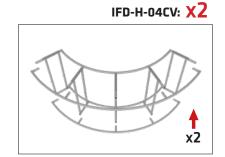

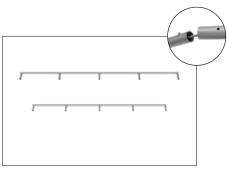


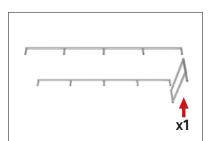

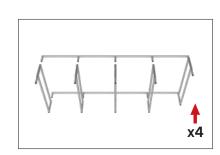

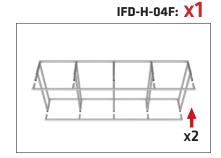

IFD-H-04CV Left





IFD-H-04CV Right

Set Up Instructions IFD-H-12CC

IFD-H-04CV Right:

Assemble end cap on right side only. Use hand tool when shown.

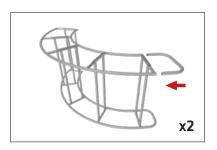

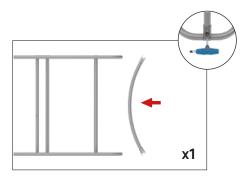

CROSSBAR SUPPORT:

Attach across second opening from the right.




COUNTER TOP SUPPORT:


For leveling end cap counter top.



IFD-H-04CV Left:

Assemble end cap on left side only. Use hand tool when shown.

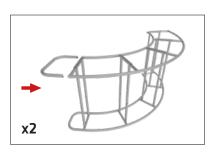

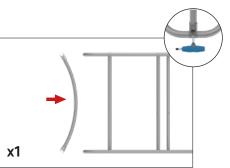

CROSSBAR SUPPORT:

Attach across second opening from the left.



COUNTER TOP SUPPORT:

For leveling end cap counter top.




IFD-H-04F:

Do not assemble end caps for IFD-H-04F center counter.

Assemble crossbar support for IFD-H-04F center counter.






IFD-H-04CV Right

Set Up Instructions IFD-H-12CO


CONNECT FRAMES TOGETHER:

Connect x3 frames together with x2 butterfly clips (WLM-P-SCS) per

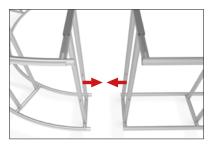

GRAPHIC INSTALL:

frame connection. Attach one clip to outside of frames and one clip to inside of frame using hand tool.

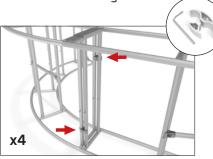

WLM-P-SCS

Step 2: Grip the fabric tightly and stretch around bottom of desk to pinch zipper into place. Zip the print together for taut finish.



SHELVES:


(OPTIONAL) To add shelves to frame, position and level shelf on




Step 3: Attach countertop panels to fabric counter with Velcro. Start at one end and work you way across to the other side.




frame before tightening clamps down with hex tool.

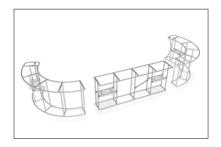

Step 4: Join counter top panels together front and back with black push-on clamps.

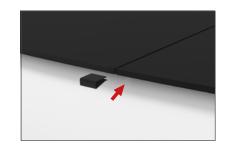





Step 1: Unzip print and slide print

onto frame like a pillow case.