


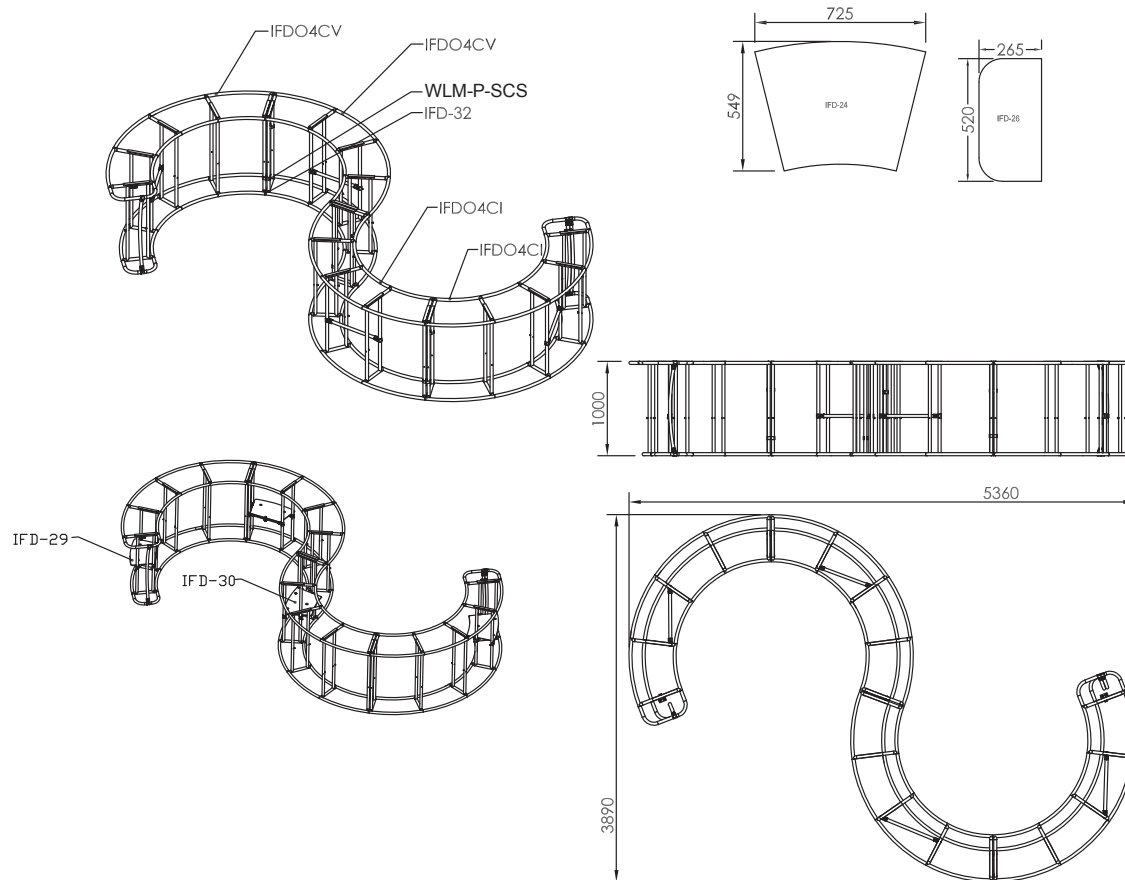

Hardware												Countertop			Graphics		Accessories			Shipping Case		
IFD04CV	2											Yes / No			Single or Double-sided		IFD-29	2		CA900		
IFD04CL	2											IFD-24	16		None		IFD-30	2		CA500		
WLM-P-SCS	6											IFD-26	2		Complete					NYLON BAG		
IFD-32	12														Split-ship							
No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm		Confirm	No.	Quantity	Confirm	No.	Quantity	Confirm









Set Up Instructions

FRAME ASSEMBLY:

Assemble base parts and poles by pressing and pushing together.

*NOT ALL PARTS WILL BE USED:

This counter is made from x3 full kits and not all parts will be needed to complete this design.

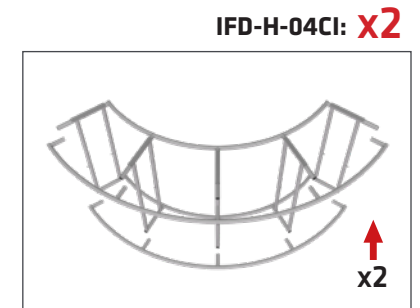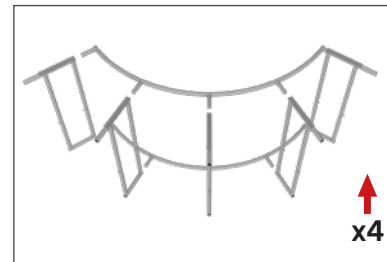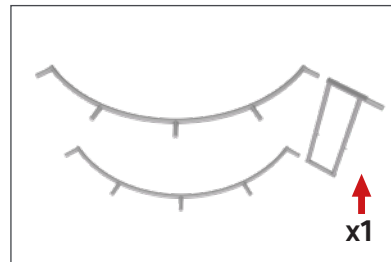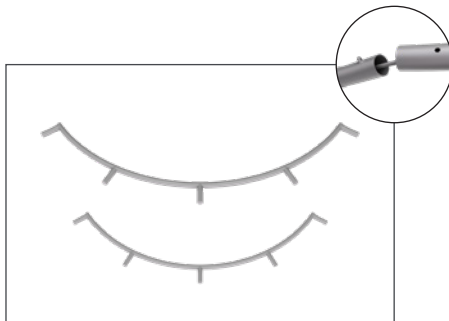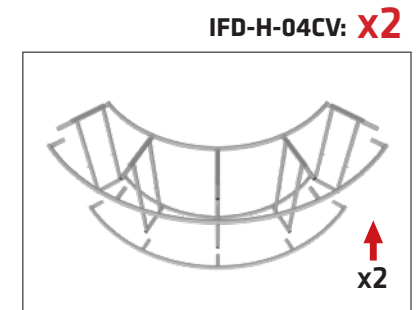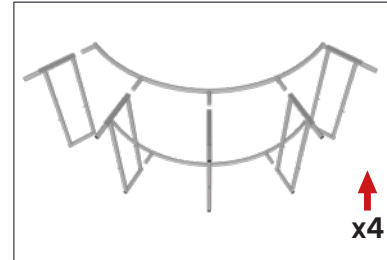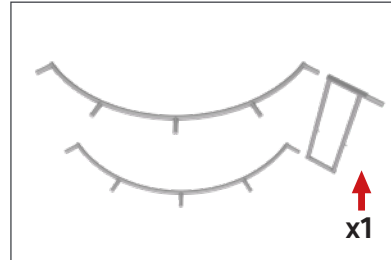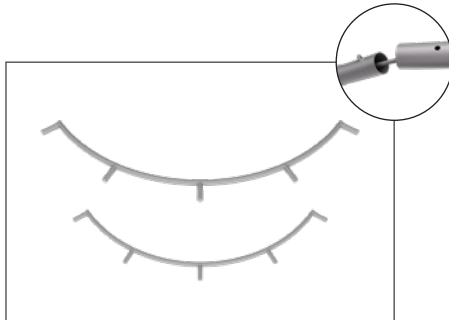


IFD-H-04CI Left

IFD-H-04CI Right

IFD-H-04CV Right



IFD-H-04CV Left

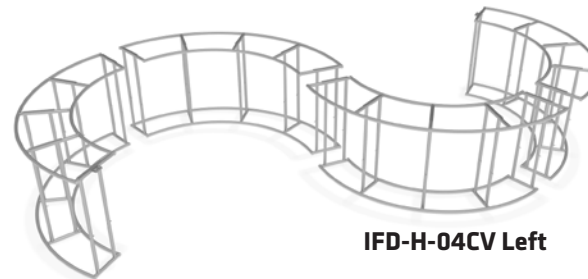

Set Up Instructions

IFD-H-04CV Right:

Assemble end cap on right side only. Use hand tool when shown.

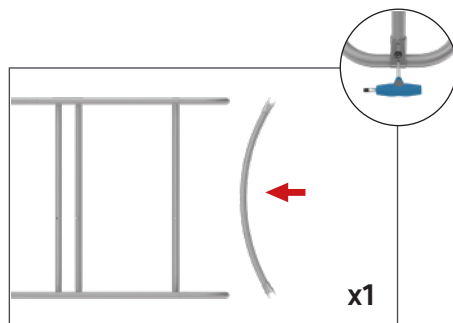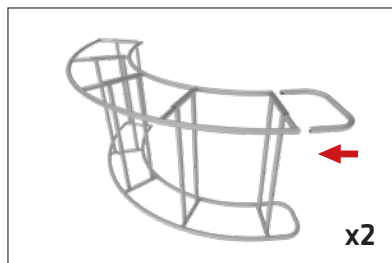

CROSSBAR SUPPORT:

Attach across second opening from the right.





COUNTER TOP SUPPORT:

For leveling end cap counter top.



IFD-H-04CV Left:

Assemble end cap on left side only. Use hand tool when shown.

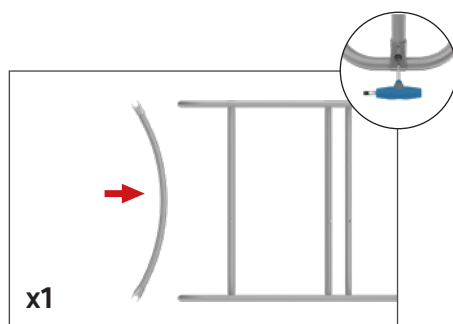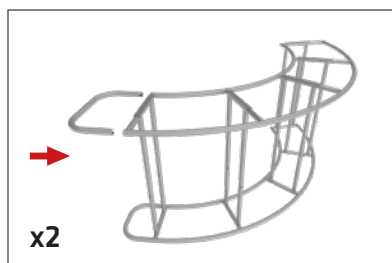

CROSSBAR SUPPORT:

Attach across second opening from the left.



COUNTER TOP SUPPORT:

For leveling end cap counter top.



IFD-H-04CI Right & 04CV Left:


Do not assemble end caps for these 2 center counters.

Assemble crossbar support for these 2 center counters.

IFD-H-04CI Right

IFD-H-04CV Right

IFD-H-04CI Left

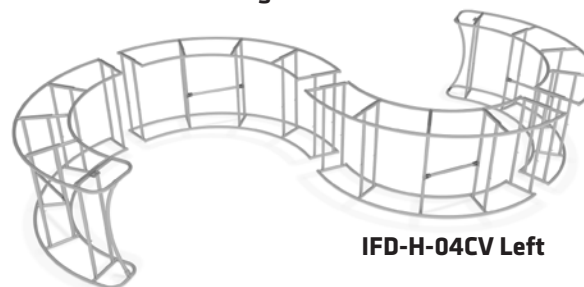


IFD-H-04CV Left


Set Up Instructions

CONNECT FRAMES TOGETHER:

Connect x3 frames together with x2 butterfly clips (WLM-P-SCS) per

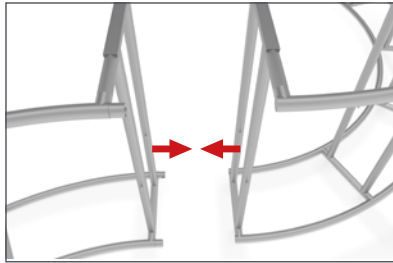

frame connection. Attach one clip to outside of frames and one clip to inside of frame using hand tool.

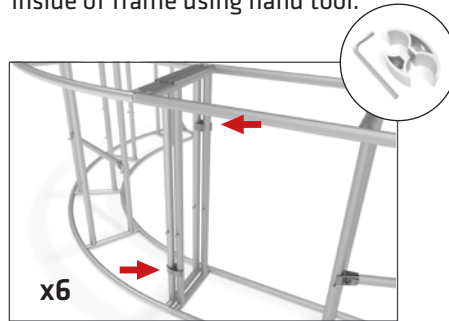


WLM-P-SCS

SHELVES:

(OPTIONAL) To add shelves to frame, position and level shelf on




frame before tightening clamps down with hex tool.

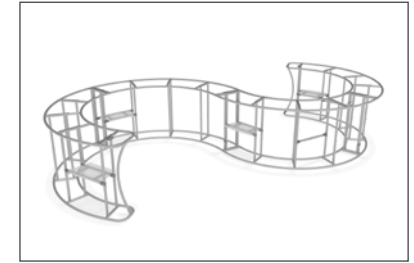


GRAPHIC INSTALL:


Step 1: Unzip print and slide print onto frame like a pillow case.

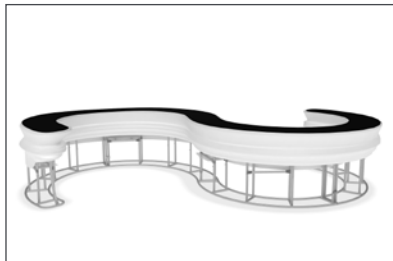

Step 2: Grip the fabric tightly and stretch around bottom of desk to pinch zipper into place. Zip the print together for taut finish.

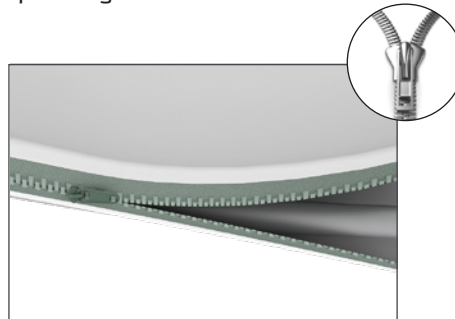

Step 3: Attach countertop panels to fabric counter with Velcro. Start at one end and work your way across to the other side.

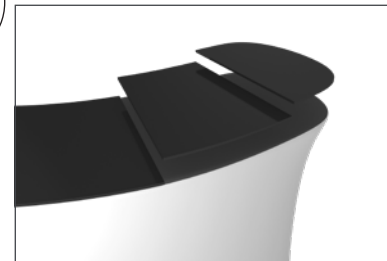

Step 4: Join counter top panels together front and back with black push-on clamps.

